

IT - SUN R1E - F. 433.920 MHz
Ricevitore radio 1 canale

Programmazione

1) - Memorizzazione radiocomando:

Premere e rilasciare il pulsante [P], il Led [L] lampeggia per 10" indicando il modo di funzionamento, trasmettere ora con il radiocomando, il Led [L] lampeggia velocemente per indicare operazione eseguita correttamente.
Attendere l'uscita dalla programmazione, per memorizzare ulteriori radiocomandi ripetere dal punto N.1.

2) - Modo funzionamento Relè:

Modo impulsivo 1 lampeggio veloce. ●○○○○○○○○●●
Modo passo-passo 2 lampeggi veloci. ●●○○●●○○●●●●
Modo timer 30" 3 lampeggi veloci. ●●●○○●●●○○●●
Modo timer 3' 4 lampeggi veloci. ●●●●○○●●●●●●

3) - Modifica modo funzionamento Relè:

Premere e rilasciare il pulsante [P], il Led [L] lampeggia per 10" indicando il modo di funzionamento, per modificarlo premere nuovamente [P], ogni pressione modifica lo stato in modo ciclico, come indicato al punto N.2, attendere l'uscita dalla programmazione.

4) - Cancellazione singolo radiocomando:

Premere e mantener premuto [P] per 10" il led [L] comincia a lampeggiare per 5", durante questo intervallo trasmettere con il radiocomando, se l'operazione è corretta il led [L] rimane fisso per 3" ed esce in automatico dalla procedura.
N.B. Si può cancellare un solo radiocomando alla volta.

5) - Cancellazione di tutti i radiocomandi:

Premere e mantener premuto [P] per 10" il led [L] comincia a lampeggiare per 5", durante questo intervallo premere e rilasciare nuovamente [P], il led [L] rimane fisso per 3" per indicare il reset totale della memoria.

GB - SUN R1E - F. 433.920 MHz
Reciver radio 1 channel

Set-Up

1) - Setting the remote control:

Press and release the [P] key, the Led [L] will blink for 10 seconds indicating the mode, transmit now using your remote, the Led [L] will start blinking faster, this indicates that the operation was performed successfully.
Now wait for the programming to be done, to memorize new remotes repeat from step N.1

2) - Relè function mode:

Impulsive mode 1 fast blink. ●○○○○○○○○●●
Step by step mode 2 fast blinks. ●●○○●●○○●●●●
30" timer mode 3 fast blinks. ●●●○○●●●○○●●
3' timer mode 4 fast blinks. ●●●●○○●●●●●●

3) - Relè mode settings:


Press and release the [P] key, the Led [L] will start blinking for 10 seconds indicating the current settings, to change it press the [P] key again, every time you press the [P] you change the function mode in a cycle like shown in point N.2, wait for exiting the programming mode.

4) - Deleting a single remote control:

Press and keep pressing the [P] key for 10 seconds the Led [L] will start blinking for 5 seconds, during this 5 seconds transmit with the remote, if the operation is correct the Led [L] will shine for 3 seconds and it will automatically exit out the procedure.
N.B. You can delete a remote one at a time.

5) - Deleting all the remotes control:

Press and keep pressing the [P] key for 10 seconds the Led [L] will start blinking for 5 seconds, during this 5 seconds press the [P] key and release it, the led [L] will shine for 3 seconds, this will indicate that the memory has been erased completely.

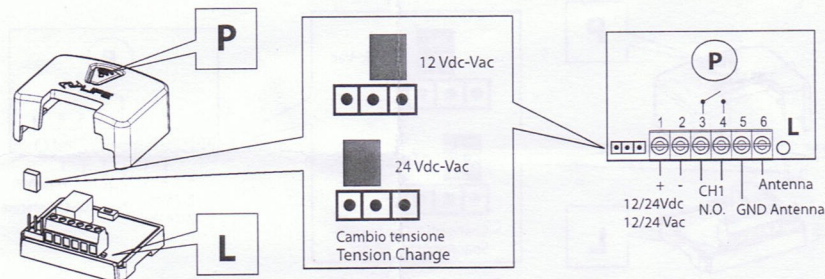

Alimentazione Power Supply	N° Canali N° Channel	Contatto Relè Relè Contact	Frequenza Frequency	Memoria codici Memory codes	Assorbimento Absorption	Temperatura Temperature	IP
12/24 Vac-Vdc	1 N.O.	1A Max 50V	433,92 MHz	20 Tx	40 mA Max	-20/+70 °C	30